

- A. Download the attached file and unzip it to the current file folder.
- B. Plug the dash camera into a computer with the short USB data cable included with your dash camera. Be sure to plug the other end of the cable into the dash camera – **NOT** the GPS.
- C. Copy the unzipped file "FWD143A.bin" to the dash camera's SD card. (Please make sure the file is copied to the root directory of the dash camera's SD card.)
- D. Unplug the dash camera from your computer and the camera will turn off.
- E. Remove the SD card from the dash camera and then insert it back.
- F. Plug the dash camera into a **wall outlet** with a **USB phone adaptor**, using the same short cable as above. The dash camera will be turned on, and the RED LED light will flash. Please kindly wait for about 1 minute. (Make sure the dash camera is always being charged during the update) When finished updating, the dash camera will automatically turn on.
- G. You will need to reset the date and time on your dash camera when the update has completed. You will also need to reset any changes you may have made that differ from the camera's default settings. Turn off, remove the camera, and install it in your vehicle.